


Vixen®

Using the Coma Corrector 2 R200SS

- The Coma Corrector 2 is usable on the R200SS telescope for visual observation or prime focus photography with a T-threaded imager. For prime focus SLR camera astrophotography, an optional T-ring appropriate to your SLR camera is required.
- The focal length of the R200SS telescope with the Coma Corrector 2 remains unchanged.
- Coma Corrector 2 accepts commercially available 52mm camera filters.

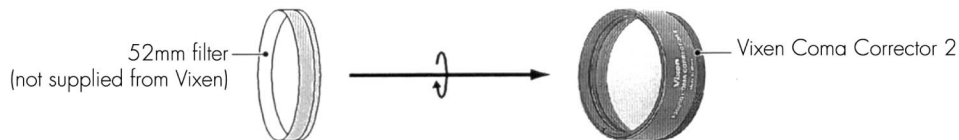

Attaching the Coma Corrector 2 R200SS

- Remove the eyepiece adapter and attachment ring from the drawtube on the focuser of the R200SS telescope by unscrewing it.
- Securely screw the Coma Corrector 2 into the secondary mirror side of the attachment ring.
- Put the eyepiece adapter and attachment ring assembly with the Coma Corrector back into the drawtube so that the Coma Corrector 2 is inserted into the drawtube.

